BEFORE YOU MOUNT THE MORTICE CHISEL & BIT ONTO THE MACHINE

- 1. Mortice chisels and bits are designed only for mortising on wood. Do not use them for any other applications.
- 2. Make sure that the tool specifications fit your particular machinery.
- 3. Check the CHISEL for signs of wear and breakage. If the cutting edges are dull, please regrind them with a proper honing stone, reproducing the original cutting angle. Do not over heat the tool while regrinding. When the wear is excessive or any sign of breakage is present, please replace it with a new tool.
- 4. Check the BIT for signs of wear and breakage. If the cutting lip or the spur is dull, please re-sharpen with a flat file. The file should only be applied on the helical flute side of the cutting lip, and on the inside of the spur. Also, the helical lip should be smooth without burr. When the wear is excessive or any sign of breakage is present, please replace it with a new tool.

WHEN YOU MOUNT THE MORTICE CHISEL & BIT ONTO THE MACHINE

Proper set up of mortice chisel and bit is the key to making clean cut mortices and the prolonged service life of the tool. If the bit head comes into contact with the cutting lip of the chisel, the rotation of the bit creates rubbing and excessive heat, which causes the tool to break and/or lose hardness.

Please make sure to leave a proper clearance (1.0 to 2.0 mm or 1/32)" to 1/16") between chisel and bit, when mounting onto machine.



Here are some easy set up instructions.

- 1. Place the chisel into the socket of the machinery.
- 2. Put a coin about 1/32" to 1/16" thickness between the face of the socket and the shoulder of the chisel to prevent the chisel from being pushed all the way into the socket.
- 3. Lightly tighten the screw to hold the chisel in place.
- 4. Fit the bit though the chisel into the drill chuck, pushing it all the way into the chisel, and secure. Please make sure that the bit is placed at the centre of the drill chuck.
- 5. Loosen the screw holding the chisel, remove the coin, push the chisel all the way into the socket, and then tighten the screw to secure the chisel. This setting will allow just the right amount of clearance between chisel and bit, so the bit will cut into the work just ahead of the chisel.
- 6. Start the machinery to make sure that the bit rotates smoothly without friction.
- 7. If you observe any abnormal conditions, please repeat the process and correct the condition.
- 8. Stop the machinery and double check that the chisel and bit are tightly secured.

INSTRUCTIONS ON PROPER USE OF MORTICE CHISEL AND BIT

MAKE SURE THAT YOU HAVE READ AND UNDERSTOOD THESE INSTRUCTIONS AND THE USERS MANUAL OF THE CHISEL MORTICING MACHINE YOU ARE USING.



WARNING UNLESS USED CORRECTLY AND IN ACCORDANCE WITH THESE INSTRUCTIONS, USERS AND PERSONS NEAR BY MAY SUFFER SERIOUS INJURIES.

- 1. This tool has extremely sharp cutting lips and points, which may cause injuries. Please handle with extra care and never touch the tool in action.
- 2. This tool consists of a chisel and a bit that are designed to work together. Never use one or the other, or match a different size tool or another manufacturer's tool.
- 3. This tool is designed to bore a mortice in solid wood materials. Do not use for any other purpose or on other materials.
- 4. Before use, make sure that the tool is in perfect condition without any cracks, bend, strain, worn out cutting lips, missing parts, etc. If any abnormal condition is present, do not use the tool until the abnormal condition is corrected.
- 5. When mounting the tool to the machine, make sure that the clearance between the chisel and bit is kept as written on the reverse side. If the chisel and bit are not set up properly, friction will cause over heating of the tool, resulting in burning, fire hazard and breakage of the tool.
- 6. After mounting the tool to the machine, test run and make sure that no abnormal sound or trembling of the tool is present. In case any abnormal situation is present, repeat the mounting process and make sure that the problem is resolved before proceeding.
- 7. During operation, keep under the maximum rotation on the bit (Nmax = 3,600rpm).
- 8. Check periodically to make sure that no abnormal situation is present. Even if initial mounting of the tool was properly done, there are cases where the machine has problem(s) of loose chuck or shaft, etc. causing abnormal situations to arise during the course of operation.
- 9. When working on hardwood materials or knots, try to bore in increments, avoiding the situation where the rotating bit keeps rubbing on the work piece instead of cutting into it. This situation will result in over heating and losing hardness of the tool and fire hazard.
- 10. Do not jam the tool into the work piece. This may cause the tool to break, and broken piece(s) may hit the operator and/or any persons nearby. Please wear eye protection while operating.

